


# LGL006 英文说明书\_V2版

尺寸: 68\*105mm, 材质:100g书写纸

印刷: 四色印刷  C0 M63 Y100 K0

折叠方式: 折页

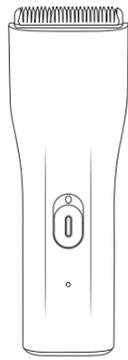

**Pet Clippers**  
User Manual

Thank you for choosing our pet hair clipper. In order to use this product correctly and improve the grooming effect and prolong the service life of the product, please refer this manual carefully before use. If you find missing accessories or have any problems with operation, usage, quality issues, etc., please contact us by email [support@oneisall.com](mailto:support@oneisall.com)

Model: LGL006 ON-D74

**Package Including**

  
Standard Blade

  
3-6mm Guard Comb

  
9-12mm Guard Comb

  
Oil Bottle

  
USB Charging Cord

  
Cleaning Brush

  
Storage Bag

**Technical Specifications**

Rated Voltage: 3.2V	Battery Capacity: 500mAh
Input Voltage: 5V	Charging Time: 3 Hours
Working Time: 90 Mins	Rated Power: 5W
Material: Stainlee Steel, Ceramic, ABS	

**Precautions for Use**

- ※Please use a 5V 1A plug to connect the USB charging cable. If the power of the plug is too large, it will damage the battery and cause it to fail to operate normally!
- ※After each use, remember to remove the blade, clean the inside with a brush and then oil it, so as to ensure that the next shave will not get stuck.
- ※Do not charge the product under an environment above 40°C or below 5°C.

**Product Usage**

**Loading the Guard**

- Put one side of the comb in the slot aside from the clippers body.
- Push the other side into the other slot until you hear a CLICK.

**Unloading the Guard**

Push one side of the comb out of the slot, and the comb will be easily unloaded.

**Disassemble the Blade**

- Turn off the switch.
- Press the tooth part of the blade with your thumb.
- Push it out in the direction indicated by the arrow in the picture to remove the blade.

**Assemble the Blade**

Put A into B as the picture shows and push it until you hear a CLICK.

Standard blade: Can be used all over the body, but use caution in sensitive areas.

**USB Charging**

- Plug the small end of the cable into the clipper, and the other end into a USB adaptor, or USB port on a PC, laptop, portable source, or socket.
- Make sure the clipper is off, plug the USB cable into the 5V1A adaptor, then it will start charging (the charging indicator light is red)
- The green light will turn on after fully charged, remember to unplug the charging cable.

**Attention:** During the hair-cutting, if you feel that the speed of the blade slows down, the power may be low, and it is recommended to take a charge.

**Clean and Maintenance**

**Cleaning & Maintenance for the Blade**

- Please use the brush to dean the hair on the blade.
- Push as the picture shows and use the brush to clean the hair between the blade and its steel bracket.
- Please lubricate the blade frequently, and drip the matching lubricating oil on the position of the blade as shown in the figure. bracket.

**Cleaning the Main Clipper Machine**

- Remove the blade and flush all hair from the body and blade groove with water.
- After rinsing, be sure to dry the body and blade with a cloth.
- Put the blade back together.

**NOTE!**  
Do not use gasoline, thinner or other aggressive chemicals to clean the clipper body. Water or alkaline soapy water is recommended

**Warm Prompt for Maintenance**

- Before cleaning, please make sure that the product is disconnected from the power supply and turned off!
- This product is fully waterproof and can be washed directly under the faucet.
- Be sure to dry the main body and blade with a cloth after washing if using water to clean the blade, to avoid rusting the blade spring.

**Safety Cautions**

- Do not use a wet hand to pull the charging cable, or you might be electrocuted.
- Please stop using the charger if it works abnormally.
- Do not pull the cable, or it might cause electrical leakage, short circuit or fire.
- Do not use a broken charging cable.
- Please use an original charger or charging cable instead of other brands.
- Please wipe the charging port dry before charging
- Be careful operating the clipper. This is not a toy, please keep the clipper, attachments, and accessories out of reach of the children.
- The ceramic blade is fragile, please be careful while loading and unloading. If the blade breaks, please change it immediately.

**FAQ**

**Q1. Any suggestions before using the clipper?**

A1. Firstly, you should wash and dry the pet. Secondly, if your pet's hair is tangled or too long, you should trim your pet's hair with scissors first, comb the hair smoothly, then use clippers to trim your pet. Thirdly, a little oil should be dripped on the blade for lubrication and maintenance before and after using the clipper each time.

**Q2. What is the white part of the big blade? Why does it look like plastic?**

A2. The white part is made of ceramic. There is a kind of knife used in the kitchen, the ceramic knife, which is the same production process, definitely not plastic!

**Q3. What does the guide comb 3mm, 6mm, 9mm, 12mm mean? How to use it?**

A3. The size of the blade and the guide combs means the length of the hair that can be left on your dog after a grooming. For example, if you use the blade with 1.0(mm) and the 3mm guide comb together, that it will leave 1.0mm + 3mm = 4mm long hair on your dog. If you use the blade with 1.0 (mm) and don't use a guide comb, that the hair will be shortened to 1.0mm only.

**Q4. What should I do if the battery cannot be charged or turned on?**

A4. The battery life depends on the frequency of use and the time of use. Please use a 5V 1A plug to connect the USB charging cable. If the power of the plug is too large, it will damage the battery and cause it to fail to operate normally!

**Q5. What should I do if I find missing accessories? Is there a warranty on the cat clippers?**

A5. Our products have 2 Years warranty. Please contact us via email in time If there is any problem with the product and missing accessories. I to operate normally!

**Contact Us**

**WE ARE READY TO HELP**

Oneisall offers a standard **2 years** warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within **24 hours**. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

support@oneisall.com  
+1 877-522-8578 (US) **Mon-Fri** 8am-5pm(PST)  
www.oneisall.com









@Oneisall Official