


F1-M Automatic Pet Feeder

Model: PF07

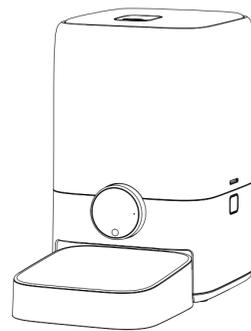

User Manual
ON-D173

Contents

| | |
|-------------------------------|----|
| Safety Warning | 01 |
| FCC Statement | 02 |
| Product Overview | 03 |
| In the Package | 04 |
| Assemble the Feeder | 05 |
| Icon Introduction | 07 |
| Operating Guide | 09 |
| The Desired Amount of Kibbles | 10 |
| Troubleshooting | 12 |
| Warranty Information | 13 |
| GPSR Product Information | 14 |

Safety Warning

- Select a stable and firm location to install the feeder to avoid it from shaking or toppling over.
- Ensure that the installation environment is dry and away from water sources and damp areas.
- Before adding pet food, check if the food is suitable for feeding to avoid using deteriorated or unsuitable food.
- Set on appropriate feeding amount and time, and do not overfeed to prevent pet obesity or indigestion.
- Observe the pet's eating situation regularly and adjust in time if there is any abnormality.
- clean the feeder regularly to keep it clean and hygienic and prevent the growth of bacteria.

01


- Pay attention to keeping the battery fully charged or the power connection normal.
- These packaging bags may cause suffocation. Keep them away from children and pets.
- Do not use the feeder when the pet cannot reach the food plate or has any physical disability.
- Do not put your fingers into the food outlet or let your fingers touch the rotor.
- Do not immerse the base part in water at any time, otherwise it may damage electronic components, such as the control panel.

FCC Statement:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference, and
 - This device must accept any interference received, including interference that may cause undesired operation.


02

Product Overview

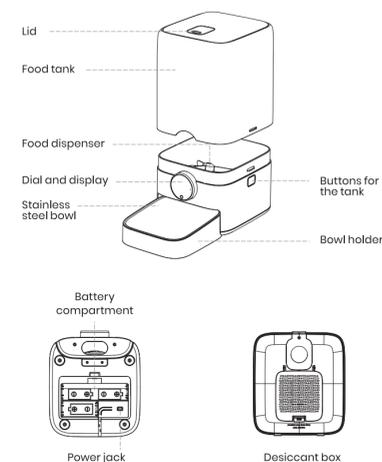

03

In the Package

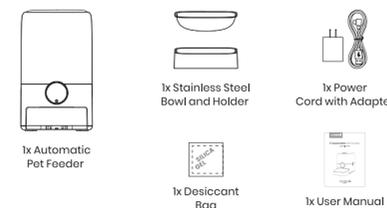

Specifications

| | |
|------------------------|---|
| Product Name: | Oneisall F1-M Automatic Pet Feeder |
| Model: | PF07 |
| Size: | 12.83*7.17*11.81 inches (326*182*300mm) |
| Capacity: | 5L |
| Rated Voltage/current: | 5V ≈ 1A |
| Material: | SUS 304 Stainless Steel+ ABS |
| Battery Type: | 3 D batteries |


04

Assemble the Feeder


- Open the food tank, and take out the bowl and accessories.
- Lift the front side of the machine. Insert the plastic bowl holder into the machine, press down and install it.
- Lay the machine on its side, open the battery compartment, insert the power cord into the type-C part, and snap the cord into the wire slot.
- Install 3 D batteries.
Note: The back-up batteries are not included in the package.

05

- Fill the tank with pet dry food and connect the charging cord to the power supply.
Note: Kibble size allowed: 2-18 mm (0.07-0.7 inch in diameter). Do not use it for canned food or wet food.

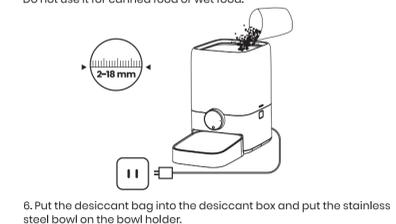

- Put the desiccant bag into the desiccant box and put the stainless steel bowl on the bowl holder.

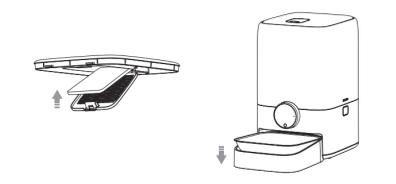

06

Icon Introduction

| Operating Guide | |
|--------------------------------|---------------------------------------|
| Unlock the Feeder: | Press and hold the dial for 3 seconds |
| Menu Selection/Adjust Numbers: | Rotate the dial |
| Setting Confirmation: | Click the dial |
| Back to Previous Menu: | Double click on the dial |

| Icon Description | |
|------------------|--|
| Feed | Manual feeding. The maximum setting is 12 servings of cat food. |
| Time | Set the clock time of the feeder device. |
| Plan | Set the feeding plan for the feeder. The maximum setting is 6 plans. |
| Reset | Clear the device's feeding plan and restart the device. |
| | 3 D batteries installed. |
| | When the battery power is low, the device emits a beeping alarm sound. |

07

PF07基础款喂食器说明书

尺寸: 105X140mm

材质: 128g双铜



印刷: 封面4色印刷 内页黑白印刷

折叠方式: 骑马钉

C0 M63 Y100 K0



Program Tutorial

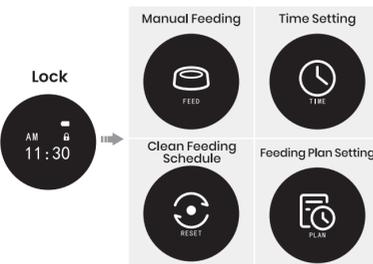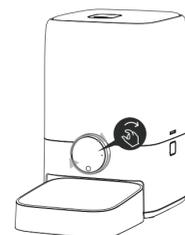


08

Operating Guide

UK/US

- Rotate the dial to select the "PLAN", and then press the button to confirm and enter the setting of the first feeding plan.

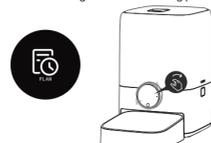

- Press the button again to confirm and set the time for the first meal in the feeding plan. After setting the time, set the portion size of the first meal. The portion size ranges between 1 and 12 portions per meal.



- Upon completion of the portion number setting, the device will directly shift to the setup of the second feeding plan.



- If the setting is completed, you can double-click the button to exit the sub-menu.

09

The Desired Amount of Kibbles

Note:

The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal. The size of the kibble we used in our lab: 0.4 inch. Here's the data from our experiment.

| Cup | Portion | Gram |
|-----|---------|------|
| 1/8 | 3 | 17 |
| 1/4 | 5 | 28 |
| 1/3 | 7 | 39 |
| 1/2 | 10 | 55 |
| 1 | 20 | 110 |

This data is for reference only. You need to test out the right amount for your pet, based on the dry food you used.

Here are the steps:

- For example, 1/4 cup equals to 5 portions, so 1/8 cup would equal to 3 portions.


$$\frac{1}{4} \text{ cup} = 5 \text{ portions}$$

$$\frac{1}{8} \text{ cup} = 3 \text{ portions}$$

10

- Set the portion number to 5.

- Measure the delivered kibbles. If the kibbles are measured as the amount you need, it means this setting is OK.

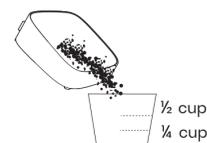

- Otherwise, adjust the portion number to let it get close to the desired amount.



11

Troubleshooting

Please attach your troubleshooting and order ID, contact us via email support@oneisall.com. We would help you solve the problem fast.

| Problems | Solutions |
|-------------------------|--|
| The feeder can not work | Check if the cord is connected well. |
| | Do not use batteries, use another type-C charging cord to see if the feeder works. |
| Desiccant Replacement | Unplug the cord and use new batteries to see if it works. |
| | Email us: support@oneisall.com |
| The dial does not work | Try to press and hold it for 3 seconds to unlock the feeder. |
| | Make sure the kibble size is less than 0.7 inch in diameter. |
| Food stuck | If the food stop in the outlet, clean it. |

12

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

- support@oneisall.com
- +877-522-8578(US) Mon-Fri 8am-5pm(PST)
- www.oneisall.com



@Oneisall Official

13

GPSR Product Information

EC REP

Name: Apex CE Specialists GmbH
Add: Grafenberger Allee 277-287,40237 Düsseldorf,DE
Contact Person: Walls Van
Zip Code: 40237
E-Mail: info@apex-ce.de

UK REP

Name: APEX CE SPECIALISTS LIMITED
Add: 61 East Union Street, Manchester, England, M16 9AE
Contact: Wells
Tel: +441616371080
E-Mail: info@apex-ce.com

Product Name: F1-M Automatic Pet Feeder
Brand: Oneisall
Product Model: PF07
Input: 5V ≈ 1A

GPSR Manufacturer Information
Business Name: Shenzhenbenfandianzhangwuyouxiangongsi
Manufacturer's Address: CN, 518000, Guangdong Sheng, Shenzhen, Longhua District, Minxin Community Bishui Longting Building 8 Unit, 7B
Tel: +86 185 6587 6424
E-Mail: topservice4u@hotmail.com



Made in China

14

Any problem you have, please contact us:
support@oneisall.com



Oneisall support

ON-D173