 


H1-C Automatic Pet Feeder **with Camera**

Model: PF11

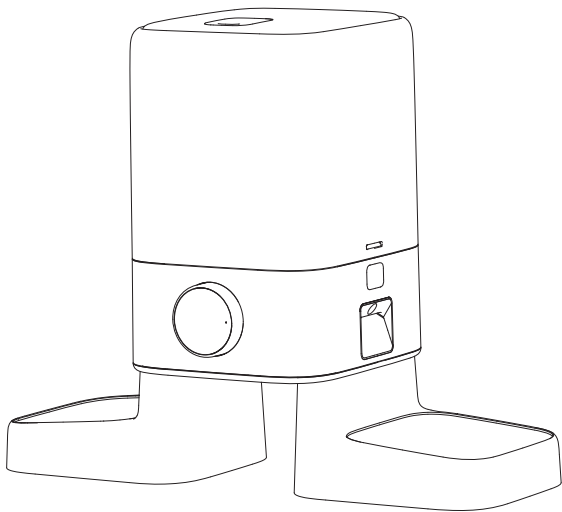

User Manual
ON-D177



Contents

| | |
|--------------------------------------|-----------|
| Safety Warning | 01 |
| Product Overview | 02 |
| In the Package | 03 |
| Specifications | 03 |
| Assemble the Feeder | 04 |
| Icon Introduction | 06 |
| Connect to APP | 08 |
| The Desired Amount of Kibbles | 11 |
| Troubleshooting | 13 |
| Warranty Information | 14 |


Safety Warning

1. Select a stable and firm location to install the feeder to avoid it from shaking or toppling over.
2. Ensure that the installation environment is dry and away from water sources and damp areas.
3. Before adding pet food, check if the food is suitable for feeding to avoid using deteriorated or unsuitable food.
4. Set an appropriate feeding amount and time, and do not overfeed to prevent pet obesity or indigestion.
5. Observe the pet's eating situation regularly and adjust in time if there is any abnormality.
6. Clean the feeder regularly to keep it clean and hygienic and prevent the growth of bacteria.
7. Pay attention to keeping the battery fully charged or the power connection normal.
8. These packaging bags may cause suffocation. Keep them away from children and pets.
9. Do not use the feeder when the pet cannot reach the food plate or has any physical disability.
10. Do not put your fingers into the food outlet or let your fingers touch the rotor.
11. Do not immerse the base part in water at any time, otherwise it may damage electronic components, such as the control panel.
12. Please use the power adapter provided with the device. Non-original adapters cannot guarantee the normal operation of the device.
13. Please read the user privacy agreement for the camera in the APP.

  Product Overview

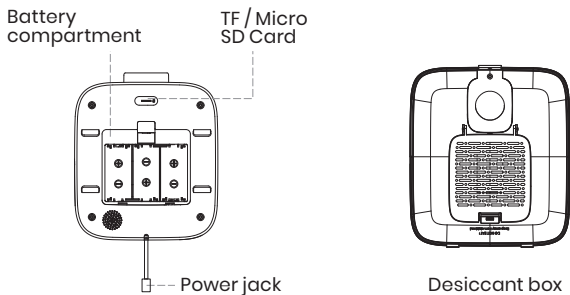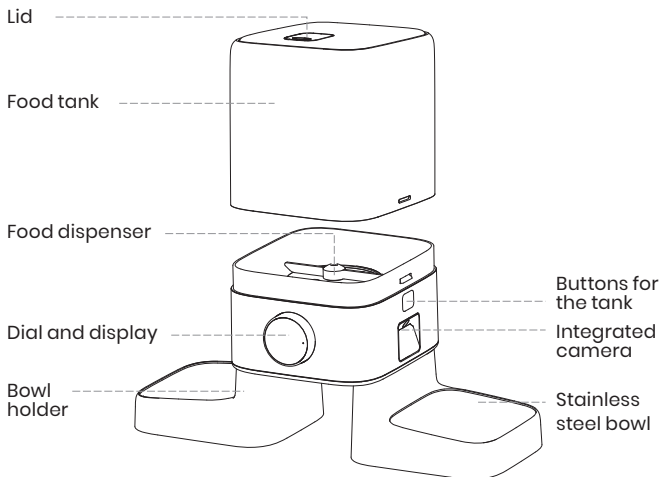


In the Package

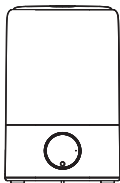 

1x Automatic
Pet Feeder



 2x Stainless Steel
Bowl and Holder



1x Power
Cord with Adapter



1x Desiccant
Bag




1x User Manual

Specifications


| | |
|-------------------------------|--|
| Product Name: | Oneisall HI-C Automatic Pet Feeder with Camera |
| Model: | PF11 |
| Size: | 17.24*8.35*13.31 inches (438*212.2*338mm) |
| Rated Voltage/Current: | 5V \equiv 2A |
| Material: | SUS 304 Stainless Steel+ ABS |
| Battery Type: | 3 D batteries |

Assemble the Feeder

 
1. Press on the button of both sides to open the food tank, and take out the bowl and accessories.

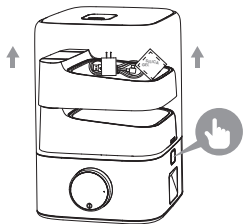

 2. Lift the machine. Insert the plastic bowl holder into the slot at the bottom of the machine until you hear a clicking sound, indicating that it is installed properly.

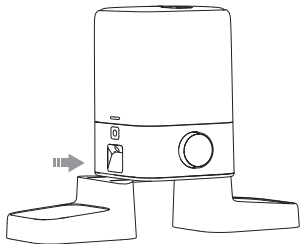


 3. Place the machine on its side, insert the power cord into the external extension cord.

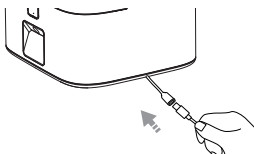

4. Lay the machine on its side, open the battery compartment, install 3 D batteries.

 
Note: The back-up batteries are not included in the package.

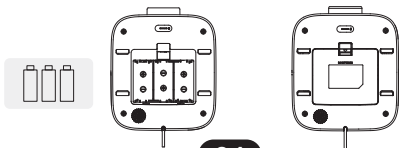

5. Insert a TF card

Note:

 
- ① Use a new or formatted TF card (up to 128 GB).
- ② TF card works only with adapter power.

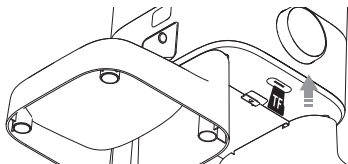



6. Fill the tank with pet dry food.

Note:

 Kibble size allowed: 2-18 mm/0.07-0.7 inch in diameter.
Do not use it for canned food or wet food.

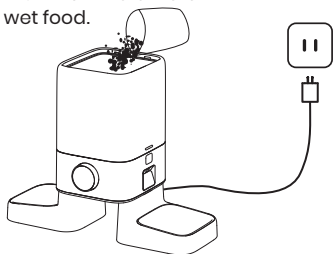

  7. Put the desiccant bag into the desiccant box and put the stainless steel bowl on the bowl holder.

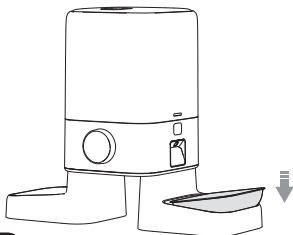





Icon Introduction



Operating Guide

| | |
|--------------------------------|---------------------------------------|
| Unlock the Feeder: | Press and hold the dial for 3 seconds |
| Menu Selection/Adjust Numbers: | Rotate the dial |
| Setting Confirmation: | Click the dial |
| Back to Previous Menu: | Double click on the dial |

Icon Description

| | |
|---|---|
| Feed | Manual feeding. The maximum setting is 12 servings of cat food. |
| Time | Set the clock time of the feeder device. |
| Plan | Set the feeding plan for the feeder. The maximum setting is 10 plans. |
| Mic | When the icon is flashing, press and hold the button to record sound. Do Not support to record a calling message via APP currently. |
| Wifi | In the case of flashing icon, the feeder can search for and connect to Wi-Fi. |
| Reset | Clear the device's feeding plan and restart the device. |
|  | 3 D batteries installed. |
|  | When the battery power is low, the device emits a beeping alarm sound. |
|  | Displays when a TF card is inserted and recognized. Not shown if no TF card is inserted or when operating on battery only. |
|  | Displays when the power adapter is connected. Not shown when the unit is not connected to external power. |

  Lock

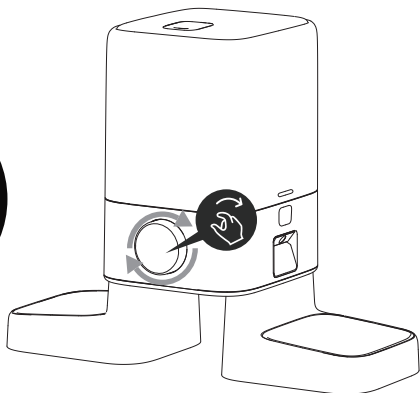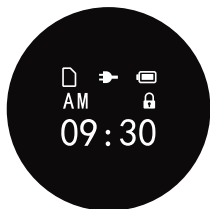


Manual Feeding



Time Setting



 
Feeding Plan Setting

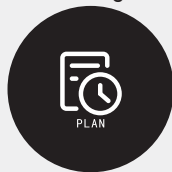


Wi-Fi Connecting



 Voice Recording

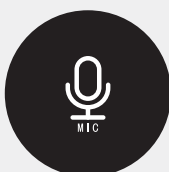

Clean Feeding Schedule

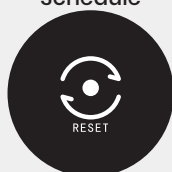 



Connect to APP

1. Download and install the Oneisall APP from the app store.




Oneisall APP

  2. Connect the feeder according to the instructions.

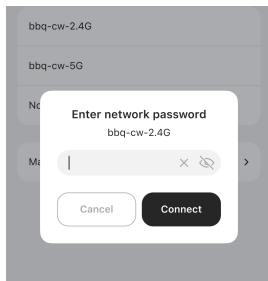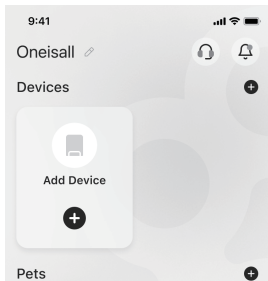

 - Select the Wi-Fi network and enter the password.
- When connecting to the device, please make sure that the Bluetooth on your mobile phone is turned on.


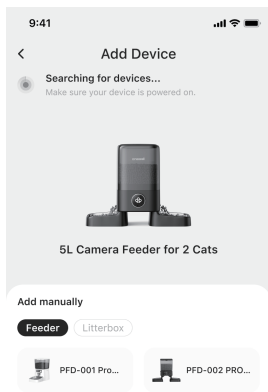


Program the
feeder manually




Program the
feeder on the APP

  
3. If you have any questions, please consult the Oneisall online customer service. Click on the upper right corner of the APP to enter the real-time customer service chat window and inquire about product usage issues online.

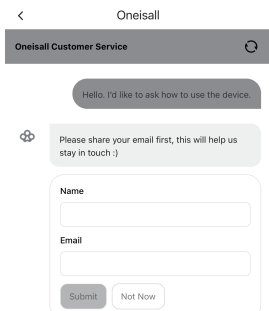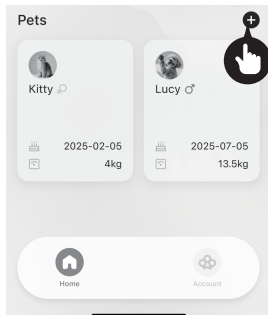

 4. Click the camera icon to access the dual-camera perspective.

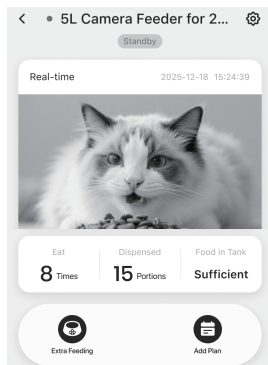

 5. The device features functions of video screenshot taking, recording video and voice intercom.

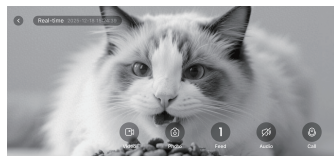

The Desired Amount of Kibbles

Note:

The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal.

The size of the kibble we used in our lab: 0.4 inch. Here's the data from our experiment.



| Cup | Portion | Gram |
|-----|---------|------|
| 1/8 | 2 | 15 |
| 1/4 | 4 | 29 |
| 1/3 | 6 | 44 |
| 1/2 | 9 | 58 |
| 1 | 18 | 130 |

- The amount for each bowl

This data is for reference only. You need to test out the right amount for your pet, based on the dry food you used.


Here are the steps:

  1. For example, 1/4 cup equals to 4 portions, so 1/8 cup would equal to 2 portions.




2. The PORTION number shown on the display means the amount for each bowl. For example, Set the portion number to 4, the feeder will dispense 4 portions from both its left and right feeding bowls.

 3. Measure the delivered kibbles. If the kibbles are measured as the amount you need, it means this setting is OK.

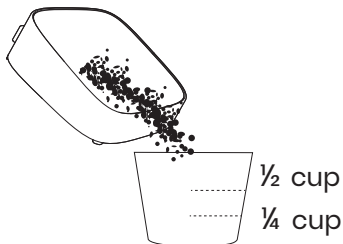

 4. Otherwise, adjust the portion number to let it get close to the desired amount.

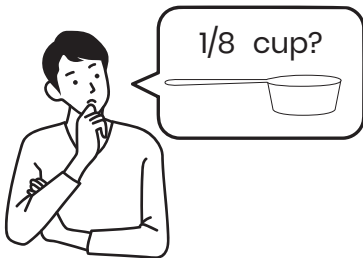

Troubleshooting

Please attach your troubleshooting and order ID, contact us via email support@oneisall.com.

We would help you solve the problem fast.

| Problems | Solutions |
|-------------------------|--|
| The feeder can not work | Do not use batteries, use another type-C charging cord to see if the feeder works. |
| | Unplug the cord and use new batteries to see if it works. |
| | Check if the cord is connected well. |
| Desiccant Replacement | Email us: support@oneisall.com |
| The dial does not work | Try to press and hold it for 3 seconds to unlock the feeder. |
| Food stuck | Make sure the kibble size is less than 0.7 inch in diameter. |
| | If the food stop in the outlet, clean it. |
| Lens blurry | If the camera lens appears blurry, clean it with soft cloth. |

Warranty Information

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1877-522-8578(US) Mon-Fri 8am-5pm(PST)

🌐 www.oneisall.com



Oneisall support



@Oneisall Official



Any problem you have, please contact us:
support@oneisall.com



Oneisall
support

ON-D177