


Cordless Pet Grooming Vacuum

Model: PG07

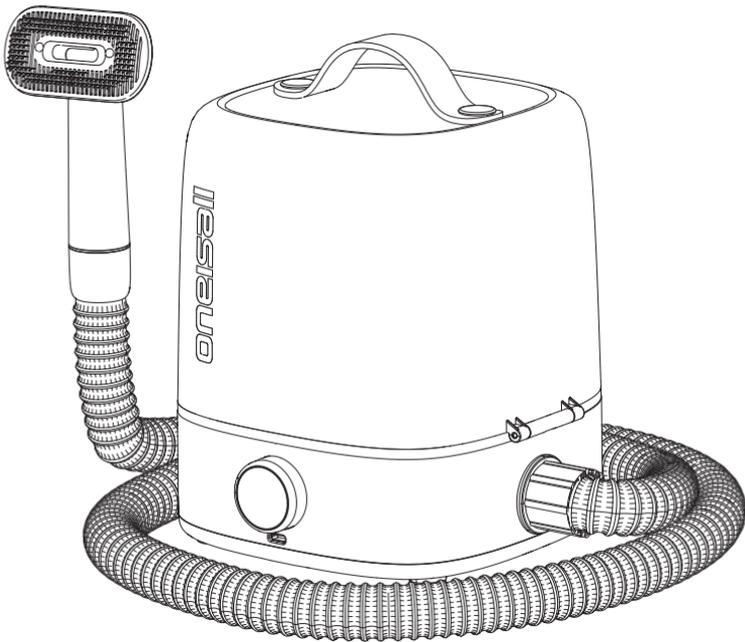

User Manual

ON-D192

Safety Warnings

- Read Before Use: Before using the pet hair vacuum, read all safety and operating instructions.
- Supervision: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Cord Management: **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- Do not use to suck up water (for vacuum cleaners only).
- Please do not disassemble the product, the wrong assembly method may cause electric shock or fire. Please contact our company if maintenance is needed.
- Do not immerse in water for cleaning.
- The hose should be checked regularly and must not be used if damaged.
- Please keep the dust cup and filter clean.
- The appliance is only to be used with the power supply unit provided with the appliance.
- Please do not inhale flammable or combustible liquids such as gas o-line; In addition, please do not use the machine in or near an environment with flammable or combustible gases.
- Do not use it while smoking or working with other high-temperature items (matches, hot ash, etc.).
- Please do not put things into the opening or block the opening. Please unplug the power cord when you need to change the parts or conduct maintenance.
- Please do not use or keep it outdoors or in other wet places. Please do not use products with fragrance as the fragrance may contain flammable chemicals.

Use Precautions

Do not operate with wet hands or unplug the power cord to avoid electric shock.

Do not smoke or use other flammable material. Please do not use the machine in or near an environment with flammable or combustible gases.

There may be a strange smell during the first use; however, it will not cause adverse effects on the body and will disappear after a while. If the scorching smell persists, stop using it immediately!

Please keep the dust cup and filter clean.

If the dust cup and filter are used while dirty, they may cause product issue.

During maintenance, turn off the power supply and unplug the power cord before proceeding.

If the power is turned on for maintenance, it will cause electric shock, unexpected accidents, or injury.

The product will stop working when the temperature rises abnormally.

In case of abnormal heating of the motor, stop using it immediately.

If the suction opening is blocked, please stop using it immediately.

Take out the dust cup and clean the inlet and filter, then open it again after 60 minutes.

Please be sure to install and use the filter.

If you remove the filter, it will damage the motor.

Use Precautions

Package List	01
Product Overview	02
How to Do if My Pets Get Nervous?	04
Operation Process	05
Tips for Accessories Option	07
Maintenance	09
QA	11
Specifications	12
Contact Us	13
GPSR Product Information	14



oneisall support



Tutorial Video

Package List



Main Vacuum Machine x1



Vacuum Hose x1



(3-6-9-12-18-24mm) Guide Comb x 6



Pet clipper



 
Deshedding brush



Pin brush



Long narrow nozzle



Sponge x2
One free sponge.
Install one in the
vacuum



Lubrication oil



Storage bag



Clean brush



Adapter



Type-c
charging cord

Product Overview

Main Vacuum

Handle

Dust bin

Power on/off


Turn right to turn on the device. Turn left to turn it off.
Keep turning it to the right to increase the suction power



Hose connection

Charging port

Press the downward button to remove the dust bin

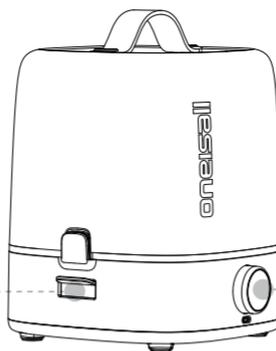

Power display
It shows the power percentage at intervals of 5%

Charging Indication

Low Power	Below 20%: Red light stays on.
	Less than 1%: Red light blinks 3 - 5 times and then shuts down.
Charging	The green light blinks.
Full Charge	100%: Digital display shows "100%" constantly and lightning icon disappears.




NOTE

1. It is recommended to fully charge the new machine before use.
 2. Insert the type-c port into the charging port.
- Charging time is 6 hours, max gear working time lasts for 60 minutes.

Pet clipper

Slide the switch up and down to turn on the pet clipper.


Note: Pet clipper need to be charged before use.

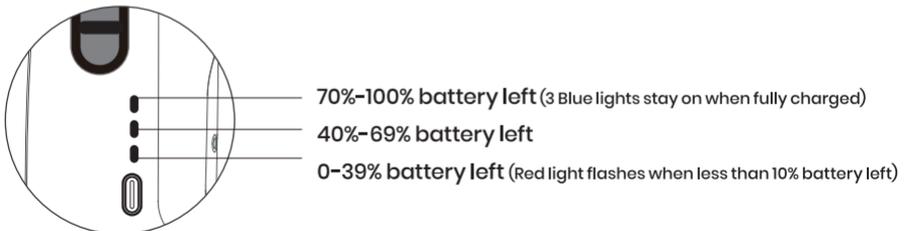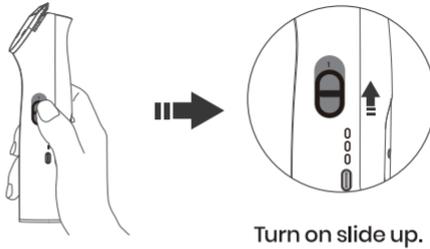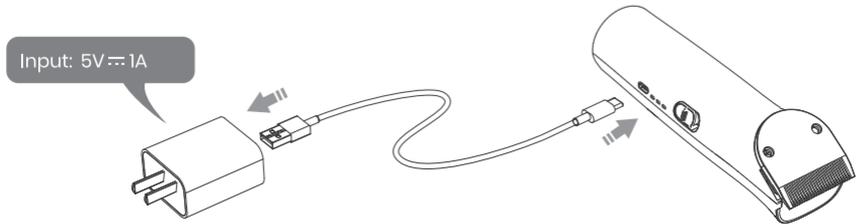


How to Do if My Pets Get Nervous?

If your pet is nervous about the noise of the machine, you may need to let him get used to the machine at first.


1. Let your pet hear the sound of the machine or familiarize your pet with the smell of the products

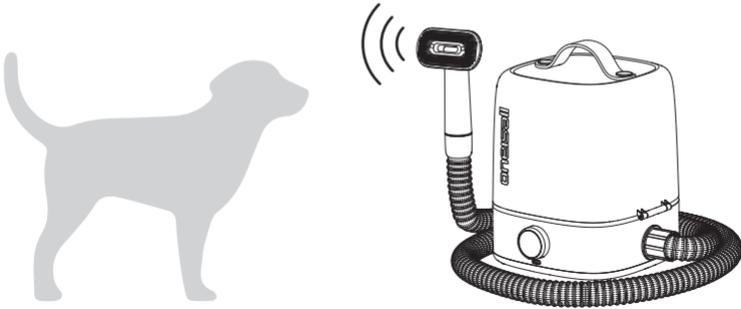

2. Treat your pet with snack.

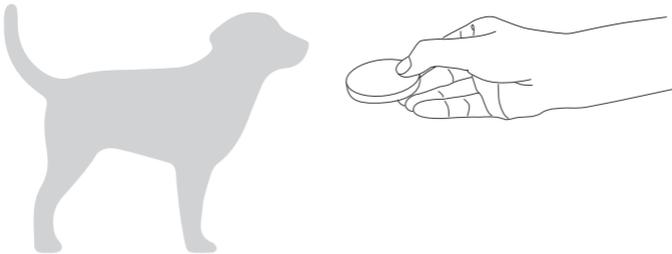


3. Start to use the vacuum . If your pet still get nervous,try to repeat the previous 2 steps and let him know that this machine would not do harm to him.

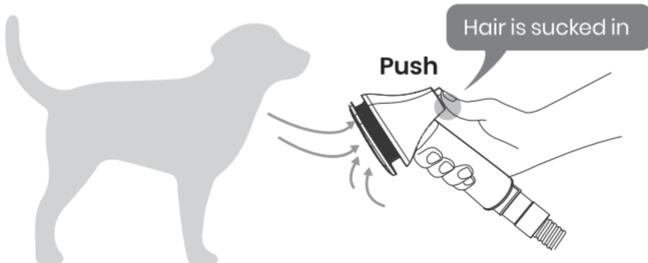


Operation Process


1. Connect the hose to the main unit. (The illustration shows the icon of the hose being screwed in.)

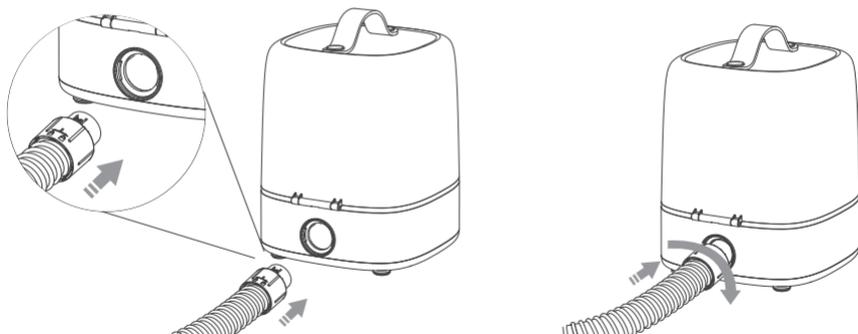


2. Connect the hose to the accessories that you need to use.

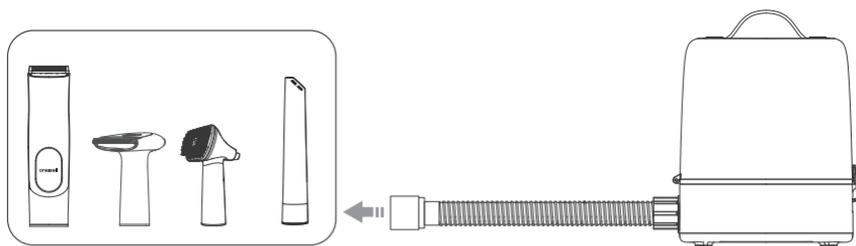


3. Turn the knob to the right to turn on the device and adjust the suction power.

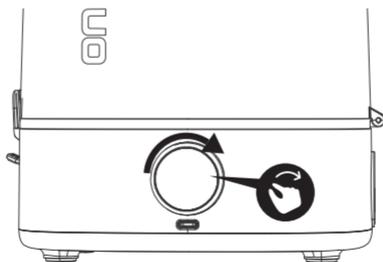


4. Groom your pet.

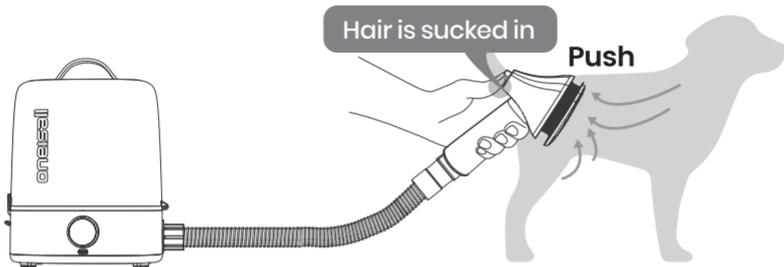

5. Turn the knob to the left to turn off the device.

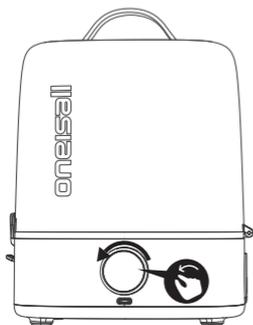

6. Empty the dust bin.

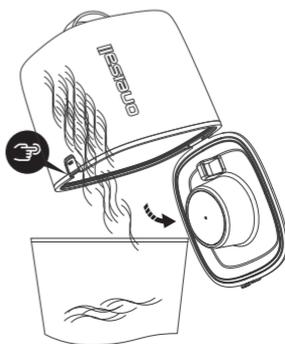

7. Install the dust bin:

- 1 Locate the positions where the arrows correspond.
- 2 Tilt it at an angle of 30 degrees and first fasten the part with the arrow.
- 3 Then press it downwards. When you hear a click, it means that the dust bin has been installed properly.




NOTE

The machine is cordless and rechargeable.
The machine couldn't be used while charging.

Tips for Accessories Option


Pin Brush

Used to clean floating hair and dander, making the hair more healthier, shinier, and softer fur.

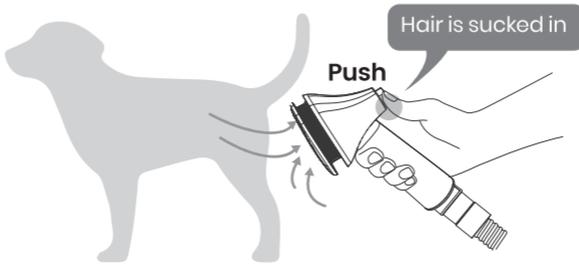


Deshedding Brush

Used to remove the pet's long and unnecessary thick hair.

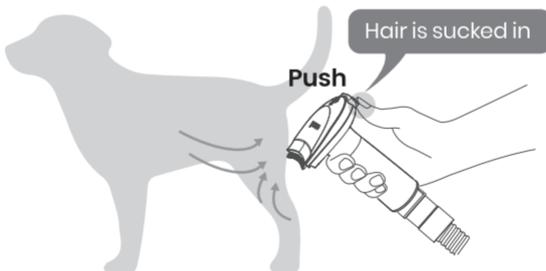

Pet Clippers

- ① Used to trim the pet's hair without leaving a mess as the hair will not fly around.
- ② The Pet clipper can be separately used!

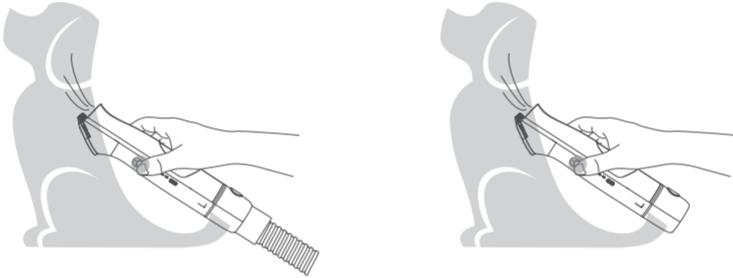

Tips for Guide Comb (used with clipper)

Choose the guide comb according to the length of pet hair you want to leave
The guide comb(3mm/6mm/9mm/12mm/18mm/24mm) is applicable for grooming different hair lengths

You can put it in our storage bag to prevent it from getting lost



3mm(1/8")



6mm(1/4")



9mm(3/8")



12mm(1/2")




18mm(3/4")



24mm (1")

Narrow Suction Nozzle

For cleaning hair and small crevices on furniture, staircase handrails, steps,

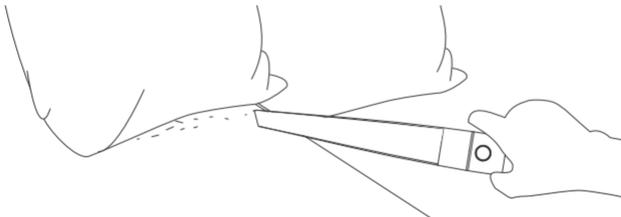


Maintenance

Clean the Dust Bin


1.Remove the Dust Bin

Press the "press" button and the dust bin will pop up. Then take it off.

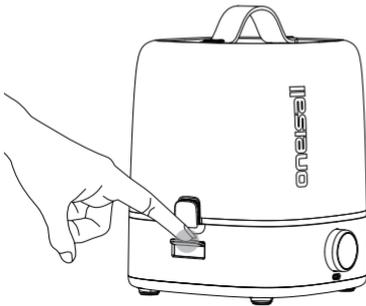


2.Empty the Dust Bin

Hold the dust bin clasp, open the cover of the dust bin, and pour out.

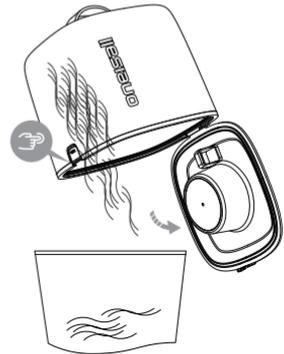



Clean the blades of pet clippers

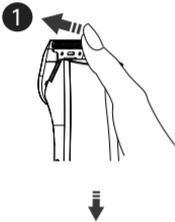

1. Push the blades out by hands.
2. Brush and wash the blades.
3. Thoroughly dry the blades.
4. Apply oil to the blades.
5. Align the slot under the blades and press to install the blades.




NOTE: The screws on the blades are non-removable.

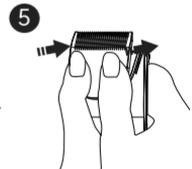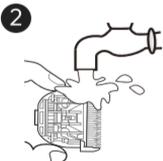


Cleaning the Sponge


1. Remove the dust bin and take out the sponge.

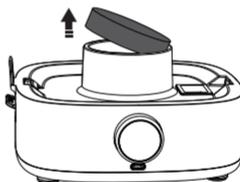

2. Clean the sponge. The sponge can be washed with water and must be dried after washing.

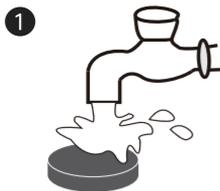

3. Put the sponge back into the machine.

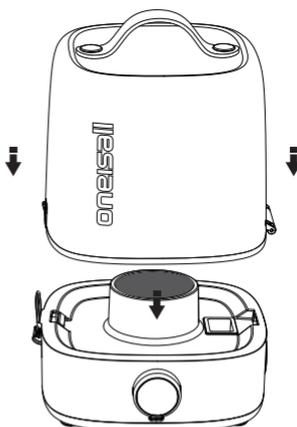

NOTE

If any accessory is cleaned with water or a wet cloth, be sure to install it only after it is completely dry. Otherwise, it may damage the motor. If you have any problems, please contact us on Amazon or via email at support@oneisall.com.

QA

Problems	Possible Causes	Solutions
Unable to turn on	The device is out of power.	Connect the charger to fully charge it first, and then turn on the machine.
	The machine is currently being charged.	Unplug the charger to stop charging, and then turn on the machine.
Weak suction	The hose is blocked.	Clean the hose and the joints.
	The dust bin is full.	Empty all the garbage in the dust bin.
The pet trimmer gets hot during use.	There is dirt inside the blade part.	Please take out the blade, clean it and apply oil to it.
The hose is damaged.	Accidental damage.	After use, detach the hose and store it in the provided storage bag. Contact our after-sales customer service for a hose replacement
	It was bitten and damaged by pets at home.	

- If the above solutions do not solve the problem, please stop using the product, and contact our customer support: support@oneisall.com

Fault Causes and Solutions

E2: Motor Overcurrent Protection.

Solution: For equipment failure, contact Oneisall after-sales for replacement if needed. support@oneisall.com

E3: Motor Vacuum Protection (triggered when hose and hair bin are blocked).

Solution: Clear hair from the bin and hose.

Clean the dust off the sponge and dry it

E5: Overcharge Current Protection.

Solution: Please use the official charger

E8: Battery Protection when working discharge makes temperature over 65°C.

Solution: Turn off and let it cool before resuming work.

Specifications

Main Vacuum Machine

Product Name	Oneisall Cordless Pet Grooming Vacuum
Model	PG07
Input	DC 5V \equiv 2A
Nominal Voltage	DC 7,2V
Rated Power	70W
Battery Capacity	5100mAh
Charging time	6 h
Working time	60 minutes

Pet Clippers

Input Voltage	DC 5V \equiv 1A
Rated Power	5W
Charging Time	About 3h
Working Time	About 2h
Battery Capacity	1400mAh

Contact Us

WE ARE READY TO HELP

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

- ✉ support@oneisall.com
- 📞 +1 877-522-8578 (US) Mon-Fri 8am-5pm (PST)
- 🌐 www.oneisall.com



Guide video



@Oneisall Official

GPSR Product Information



Name: Apex CE Specialists GmbH
Add: Grafenberger Allee 277-287,40237 Düsseldorf,DE
Contact Person: Wells Yan
Tel: +353212066339
E-Mail: Info@apex-ce.de



Name: APEX CE SPECIALISTS LIMITED
Add: 6f East Union Street, Manchester, England, M16 9AE
Contact: Wells
Tel: +441616371080
E-Mail: Info@apex-ce.com

GPSR-Manufacturer Info:

Business Name: Shenzhenbenfendianzishangwuyouxiangongsi
Manufacturer's address: CN, 518000, GuangDong Sheng, Shenzhen, Longhua District,
Minxin Community Bishui Longting Building 6 Unit, 7B
Tel: +86 185 6587 6424
E-Mail: topservice4u@hotmail.com

Product Name: Cordless Pet Grooming Vacuum
Brand: Oneisall
Product Model: PG07
Rated Voltage: 5V
Input: DC 5V $\overline{\text{---}}$ 2A





Any problems you have, please contact us :
support@oneisall.com



oneisall support



Tutorial Video