



Onesall Professional Pet Clippers User Manual

Model : YP-7268




ON-D45

Any problems you have, please contact us:
support@onesall.com


Safety Instructions

- Read Before Use:** Before using the clippers, read all safety and operating instructions.
- Electrical Safety:** Ensure that the voltage indicated on the rating label matches your electrical outlet. Do not immerse the appliance in water or any other liquids to avoid electric shock.
WARNING: Keep the appliance dry.
- Supervision:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Regular Checks:** Periodically check the clippers for damage. If the appliance or power cord shows any sign of damage, do not use it. Contact the service center for repair or replacement.
- Regular Maintenance:** Disconnect the clippers from the power source before cleaning, changing accessories, or performing any maintenance. Keep the blades clean and well-oiled to avoid overheating and ensure optimal performance. Replace blades as needed.
WARNING: Cutting blades may become hot after prolonged use.
- Storage:** After use, unplug and store the clipper in a dry place, away from pets and children.
- Handling:** Avoid touching the blades directly with your fingers. Always switch off the appliance when not in active use.
- Use for Intended Purpose:** These clippers are designed for trimming pet hair only. Do not use them for any other purpose.
- Dispose:** Dispose of the clipper and its accessories according to local regulations for electronic waste.

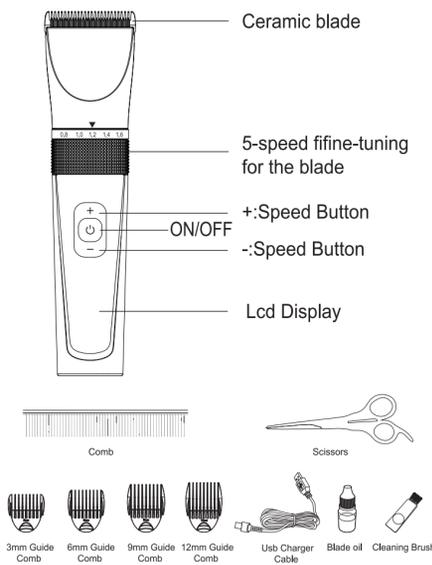


Charging Use

- Insert the USB charging cable into the charger, and then plug the USB charging cable into the power socket (the USB charging cable can be plugged into the socket with USB interface, desktop computer, notebook computer, mobile power supply, etc.)

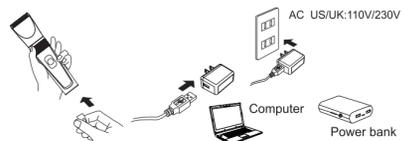

LCD icon description:

- fully charged: recharge icon on
- in the charging :recharge icon flashing, display current power percentage;
- in the discharge:display current speed &percent charge;
- low battery: recharge icon flashing, display current power percentage
- plug and play:display current speed, percent charge icon flashing

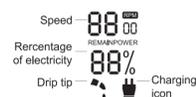

The clippers use rechargeable batteries. If the battery fails, it is not recommended to replace the battery by yourself, and you should contact customer service in time for help.

Fixed Length Function


Notice:

- The size of the blade and the guide combs means the length of the hair that can be left on your dog after a grooming.
- For example, if you use the blade with 1.0(mm) and the 12mm guide comb together, that it will leave 1.0mm + 12mm = 13mm long hair on your dog.
- If you use the blade with 1.0 (mm) and don't use a guide comb, that the hair will be shortened to 1.0mm only.
- Hence, the rest length of your dog's hair is based on the blade size and the guard size. The shortest length will be 0.8mm (with the 0.8 blade only) and the longest length will be 13.8mm (with the 1.8 blade and 12mm guide comb).

- Determine the need hair length
- Select the appropriate guide comb



- 3.Fine tune the blade

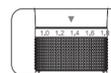

Moving the button left and right to adjust the blade (0.8mm-1.8mm)

Guide Comb Installation

- Like the picture, hold both sides and push when butting the button positions. (Notes: the comb should not be loose or easy to fall off after being butted.)
- guide comb dismantle: Remove the butted positions with hands on its both sides and then remove the comb



Blade Removal & Installation


Blade Removal:

- Adjust the adjusting ring to 0.8mm before remove the blade.
- Like the picture, press down the moving blade with the thumb and then remove the blade.
- Please hold with the other hand to avoid the blade falling off.



Blade Installation:


- Adjust the adjusting ring to 1.8mm before installing the blade.
- Direct the blade (B) at the hair clipper's slot (A) and plug in.
- Push the blade down until it clicks.

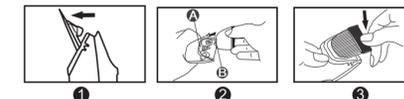


Cleaning & Maintenance

Taper Blade Cleaning:

- Clear up the blade with cleaning brush.
- The blade can be removed out for cleaning.
- The moving blade can be turned back, and then cleaning the hair between the moving blade and the fixed blade.
- The clipper body can also be cleaned with water.
- After cleaning the clipper body, dry the body with a dry cloth.

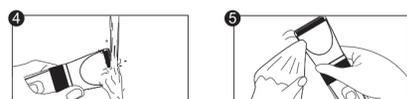

Taper Blade Maintenance:

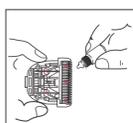

Before or after use, maintain the blade by dripping some oil on the red point places like the left picture.(oil included)

Specification

Professional Pet Clipper	Battery	1200mA lithium battery
		Charging time: 1.5 hours
Specific Adapter	Operating time with full charge: about 2 hours	Input: 110V - 240V 50/60Hz
		Input: 5V = 1A

Precautions For Use

- Please do not disassemble the product.
 - The product can only be cleaned by cloth with little water or mild soap solution.
 - Do not charge the product under an environment above 40 C or below 5 C
- The product can produce little heat during using or charging, which is normal.
 - Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

Q & A

Q1. Any suggestions before using the clipper?

- Fristly, you should wash and dry the pet.
- Secondly, if your pet's hair is too long, you should trim your pet's hair with scissors first, comb the hair smoothly, then use clippers to trim your pet.
- Thirdly, before and after using the clipper, a little oil should be dripped on the blade for lubrication and maintenance.

Q2. What does the guide comb 3mm, 6mm, 9mm, 12mm mean? How to use it?

A2. The size of the blade and the guide combs means the length of the hair that can be left on your dog after a grooming. For example, if you use the blade with 1.0(mm) and the 12mm guide comb together, that it will leave 1.0mm + 12mm = 13mm long hair on your dog.

If you use the blade with 1.0 (mm) and don't use a guide comb, that the hair will be shortened to 1.0mm only.

Q3. What should I do if the battery cannot be charged or turned on?

A3. The battery life depends on the frequency of use and the time of use. If it is not used for a long time, it is recommended to charge the hair clipper at least once every three months to ensure battery life.

Lifetime Replacement Guarantee

Thanks for your purchase. If you ever have any issues with the clipper, please contact us for a free replacement or refund. We will get back to you within 24 hours.

GPSR Product Information

EC REP Name: Apex CE Specialists GmbH
 Add: Grafenberger Allee 277-287,40237 Düsseldorf,DE
 Contact Person: Wells Yan
 Tel: +35321066339
 E-Mail: info@apex-ce.de

UK REP Name: APEX CE SPECIALISTS LIMITED
 Add: 6f East Union Street, Manchester, England, M16 9AE
 Contact: Wells
 Tel: +441616371080
 E-Mail: info@apex-ce.com

GPSR-Manufacturer Info:
 Business Name: Shenzhenbenfendianzishangwuyouxiangongsi
 Manufacturer's address: CN, 518000, Guangdong Sheng, Shenzhen, Longhua District, Minxin Community Bishui Longting Building 6 Unit, 7B
 Tel: +86 185 6587 6424
 E-Mail: topservice4u@hotmail.com

Product Name: Pet Clippers
 Brand: Onesall
 Product Model: YP-7268
 Input: 5V = 1A

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.



Contact Us

WE ARE READY TO HELP

onesall offers a standard **2-year** warranty. If you have any issues with your onesall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our onesall support team is available 7 days a week and will respond to your inquiry within **24 hours**. Thank you for choosing onesall.

Please note that the onesall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

- support@onesall.com
- +1877-522-8578 (US) Mon-Fri 8am-5pm (PST)
- www.onesall.com



Onesall support



@onesall Official



Any problems you have, please contact us:
support@onesall.com



Onesall support

YP-7268 美英说明书

尺寸: 105*145mm, 材质:128g双铜+哑油

印刷: 四色印刷 C0 M63 Y100 K0

折叠方式: 风琴折页