PC19 英文说明书
尺寸：105*140mm
材质：128g 双铜 + 连线哑油
印刷：双色印刷(黑 +PANTONE 2018C)
装订方式：风琴折页 (5 折 6 页)

105mm
140mm

oneisall
TRANSFORM HOW YOU PET

HomePro A1

Model: PC19



User Manual

If you have any questions, you can contact us:
support@oneisall.com

Safety Warning

1. Read Before Use: Read all safety and operating instructions before using the clipper.

2. Electrical Safety: Ensure the voltage on the rating label matches your power supply. Do not immerse the device in water or other liquids.
Warning: Keep the device dry.

3. Supervision: This appliance may be used by children aged 8+ and persons with reduced physical, sensory, or mental capabilities, or lack of experience, if supervised or instructed on safe use and aware of the risks. Children must not operate, clean, or maintain the device without supervision.

4. Inspection: Check the clipper regularly for damage. Do not use if the device or power cord is damaged. Contact a service center for repair or replacement.

5. Maintenance: Unplug before cleaning, changing attachments, or maintenance. Keep the blade clean and well-oiled to prevent overheating and ensure performance. Replace the blade as needed.
Warning: The blade may become hot during use.

6. Storage: Unplug after use and store in a dry place, out of reach of children and pets.


7. Operation: Do not touch the blade directly and always switch off the device when not in use. If abnormal noise occurs after blade installation, stop use immediately and reassemble it according to the user manual.

8. Intended Use Only: For pet grooming only. Do not use for other purposes.

9. Disposal: Dispose of the device and accessories in accordance with local e-waste regulations.

--The appliance is only to be used with the power supply unit provided with the appliance.
--It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
--This appliance contains batteries that are non-replaceable.
--WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
--If an electronic version of the manual is required, please contact the manufacturer to obtain it.

Package Contents

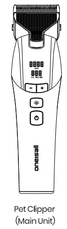
Pet Clipper (Main Unit)


1/8" (3mm) Metal Guide Comb


1/4" (6mm) Metal Guide Comb


3/8" (10mm) Metal Guide Comb


1/2" (13mm) Metal Guide Comb


5/8" (16mm) Metal Guide Comb


3/4" (19mm) Metal Guide Comb


7/8" (22mm) Metal Guide Comb


1" (25mm) Metal Guide Comb


Blade Oil


Cleaning Brush


Type-C Charging Cable


Power Adapter



Storage Bag


User Manual

Specifications

Product Name:	HomePro A1
Product Model:	PC19
Working Voltage:	5V
Battery Capacity:	4600 mAh
Charging Time:	180 min
Runtime:	280 min
Input:	5V ⎓ 2A
5-Speed Adjustment:	7000RPM/7500RPM/8000RPM/ 8500RPM/9000RPM

Product Overview

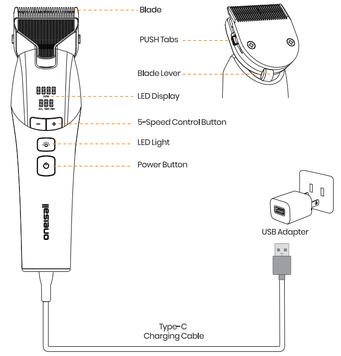

oneisall
TRANSFORM HOW YOU PET

Any problems you have, please contact us :
support@oneisall.com

Online support

ON-D280

Product Usage Instructions

• Power On & 5-Speed Control
Press the power button to start. Check that the blade runs smoothly with no unusual noise. Start at a low speed and adjust through 5 settings (7000–9000 RPM) for a calm grooming experience.


• Short / Close-to-Skin Trim
For short or close-to-skin cuts, no guide comb is needed. Gently place the blade flat against the skin and move slowly and evenly. Repeat until the desired length is achieved. Do not press the blade too hard.

• Built-in LED Light
The built-in light can be turned on or off independently. Use it in low-light environments or for detailed grooming areas to improve visibility and precision.


• 8 Lengths Guide Combs
Attach a suitable metal guide comb for your desired length. Start from the back and move in the direction of hair growth. Trim slowly and evenly. Do not go against the grain to avoid pulling or irritation.

Blade Installation & Removal


1. Remove Blade:
Press the PUSH tabs on both sides and pull the blade head away from the clipper.

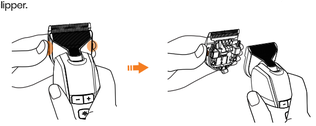

2. Install Blade:
① Press and hold the PUSH tabs on both sides.

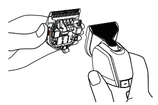


② Align the blade head with the slot, and press until it clicks into place.

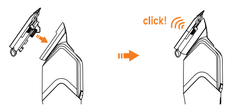


⚠ Note:
Ensure the blade is securely fitted with no gaps.

Guide Comb Selection (8 Lengths)

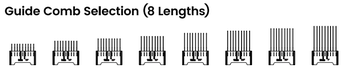

3 / 6 / 10 / 13 / 16 / 19 / 22 / 25 mm

① Choose your desired hair length.
② Select the matching guide comb.
Tip: The larger the number, the longer the remaining coat.


Install Guide Comb:
① Attach the guide comb onto the blade.

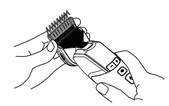

② Push the comb downward until secure (no looseness).

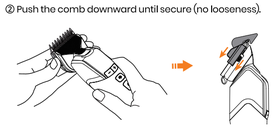


Remove Guide Comb:
Push up from the bottom of the comb and lift it off.

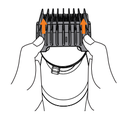


Assembly Video

Blade Cleaning & Maintenance


1. After each use, remove the blade and use the cleaning brush to remove any hair residue.

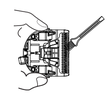

2. Apply a few drops of oil to the blade tips before or after use. (Oil included)

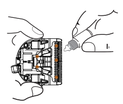

3. If not in use for a long period, clean and dry the blade thoroughly, then apply oil before storage.

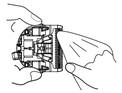

Troubleshooting

Problem:	Troubleshooting:
Product becomes hot during use	If hair or debris is on the blade, clean it and apply oil. If the issue continues, contact after-sales service: **support@oneisall.com.**
Product does not work	If battery failure or other malfunction, contact after-sales service: **support@oneisall.com.**
Cannot charge	Keep Charging Temperature Between 32°F and 104°F (0°C–40°C).

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Contact Us

WE ARE READY TO HELP

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

support@oneisall.com
+1 877-522-8578 (US) **Mon-Fri** 8am-5pm (PST)
www.oneisall.com

Online support

@Oneisall Official