135 mm

195 mm

oneisall
TRANSFORM YOUR PET PET

Ease S1 Open-Top
Self-Cleaning Litter Box with WiFi

Model: CB01

User Manual

READ AND SAVE THESE INSTRUCTIONS

ON-0225

Safety Instructions

Improper use may result in injury or product damage.

1. This product is not suitable for kittens under 6 months of age or weighing less than 2.5 lb (1.2 kg).
2. Use mineral/bentonite clumping litter only. Do not use cat litter, corn, or cassava-based litter.
3. Place the unit on a flat, hard, stable surface. Keep it >6.5 ft (>2 m) of clearance on all sides, and ensure the area is dry and free of flammable gas.
4. Avoid humid areas, away from direct sunlight and open flames.
5. Do not place the unit near heat sources (stoves, heaters, radiators) and avoid exposure to oil or mesh of pets and children. If pet attempts to chew the cord, unplug the unit immediately and contact customer service for a replacement.
6. Do not place the device in excessively hot or humid environments.
7. Use only the original power adapter. Non-original adapters may cause damage or create electrical hazards.
8. Do not scratch the unit. Use a soft cover first and with sharp objects.
9. Avoid tilting or tipping over the device to prevent accidents or damage.
10. Do not submerge the base or the NOT-light dome bases and do not rinse them directly with water.
11. The base contains weight sensors. Lift gently; do not push or drag the unit.
12. Remove the waste drawer and clean thoroughly if the product will not be used for an extended period.
13. Children must use under adult supervision.
14. Do not disassemble, repair, or modify the equipment.
15. Before installing, ensure the litter is sufficient and the waste drawer has enough capacity.
16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and
- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision

Use Precautions

Helping Your Kitty Love the New Box 01
Product Overview 02
Protection Mechanisms 03
Package Contents 04
Specifications 05
Installation Instructions 06
Button Operations 09
Disassembly (for Cleaning) 11
Troubleshooting 13
Hazardous Substances Table 14
Connect to the App 15
Contact Us 16
GPSR Product Information 17
FCC Statement: 18

Helping Your Kitty Love the New Box

Step 1: Put Both Boxes Together
Place the Ease S1 next to your cat's current litter box.



Step 2: Add a Little Used Litter
Sprinkle some used litter from the old box into the new one.

Step 3: Switch Slowly
Keep the old box until your cat fully uses the new one, then phase it out.

Product Overview

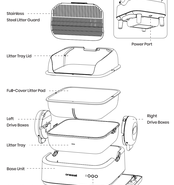

Protection Mechanisms

Protection	Priority	Description
Radar	Level1	The device stops if a moving object is near. Resumes after object leaves.
Weight	Level 2	The device pauses if any object over 2.8 ib enters the box and resumes once it leaves.
Infrared	Level 3	The device stops rotation if foreign/back of the base sensors are blocked. Resumes after unblocked.
Motor Stall	Level 4	The device stops and briefly reverses if motor encounters resistance. Resumes when clear.

NOTE
Higher priority numbers = higher protection priority

Package Contents

Specifications

Product Name:	Ease S1 Open-Top Self-Cleaning Litter Box with WiFi
Product Model:	CB01
Rated Voltage:	12V ⎓ 2A
Rated Power:	12W
Waste Drawer Capacity:	7L
Material:	ABS, stainless steel
Operating Temperature:	5~40 °C (41~104 °F)
Suitable for:	Cats ≥ 6 months old ≥2.5kg (5.6 lb)
Dimensions (L × W × H):	22.05 × 20.63 × 21.97 in (560 × 524 × 558 mm)
Wireless Connectivity:	2.4GHz & 5GHz Wi-Fi, Bluetooth

Installation Instructions

Check Operating Environment:

1. Place the device on a flat, hard surface. Do not use on carpet.
2. Keep ≥ ~6 ft (≥ ~2 m) clearance from walls and furniture on all sides.

1. Install the Supporting Legs:
① Align the leg holes in the base's pins.
② Press firmly into place.

2. Install the Waste Drawer:
① Attach the handle to the drawer over the four corners of the waste drawer and smooth it flat.

3. Install the Remove Drawer:
① Align the arrows mark on the drawer and base, then slide the drawer into the base.
② A click indicates an secure fit/light sets.

4. Install the Litter Tray Lid
① Take the litter tray lid out of the litter tray and flip it over.

② Align the ▼ marks and press the lid firmly into place.

5. Install the Left and Right Drive Boxes:
① Match "L and R" markings with the litter box.
② Align with grooves, and press until you hear a click.

6. Install the Litter Tray:
① Align the tray with the side slots and pillars if doors.
② Make sure the tray entrance faces the control panel side of the base.

7. Install the Litter Guard:
① Put the litter guard in sideways.

② Align the litter guard with the slot and insert.

② Press it down to lock in place.

8. Connect Power:
① Plug in the adapter and connect to a power outlet.

9. Add Cat Litter & Level:
① Pour litter before the red line.
② Press "Level" to smooth surface.

Button Operations

① **Manual Cleaning**
- Single Click: Start cleaning.
During cleaning, press Clean to pause. Press again to resume. Avoid pressing the button repeatedly.

Mode Behavior
- Auto Cleaning Mode (Default):
1. After a cat enters and exits, the unit detects the exit.
2. The unit waits 5 minutes (+ 1 min during form and reduce sticking.
3. The unit then starts cleaning again, rotating to drop the clumps into the waste drawer.
- Manual Cleaning Mode: You can switch to Manual Mode in the App. The unit does not clean automatically. Press Clean to start each cycle.

Recommendation:
For pregnant or nursing cats, use Manual Cleaning Mode for safety and comfort.

② **Wi-Fi (Network Setup)**
- Press and hold 3 seconds (+for pairing mode; enter Wi-Fi light flashes.
Once connected to Wi-Fi the light will stay solid.
- Connection lost: The device disconnects from the network the Wi-Fi light stays solid red.
- Connection Lost if the device disconnects from the network the Wi-Fi light stays solid red.

Level (Cat Litter Levelling)
- Press once: Levels and smooths the litter surface after adding new litter.
- During levelling, press Level to pause. Press again to resume.
- Avoid pressing the button repeatedly.

- Do not add litter during levelling. Doing so will pause the device.
- Once the area is safe, press Level again to complete the cycle.

LED Indicator Table:

Indicator	Status	Description
Manual Cleaning	White LED On	Cleaning in progress
	White LED Flashing	Cleaning paused
	Red LED On	Waste drawer is full – empty immediately
	Red LED Flashing	Waste drawer not installed properly
	Pink LED On	Manual mode enabled (adjusted in the app)
Wi-Fi	White LED On	Connected to network
	White LED Flashing	Connecting
	Red LED On	Connection lost
Cat Litter Levelling	White LED On	Levelling in progress
	White LED Flashing	Levelling paused
Status Light	White LED On	Standby (ready)
	Orange LED On	Movement detected (pet nearby or entering)
	Red LED On	Cat in unsafe position – check the device
Clean + Wifi + Levelling/Resetting together		Device not fully assembled, Ensure all parts are securely installed
	All Red Lights Blashing	- Left & right drive boxes
		- Litter tray
		- Stainless steel litter guard
		- Full cover litter pad

Disassembly (for Cleaning)

1. Remove the Litter Guard:
① Lift the handle.
② Tilt and remove the litter guard.

2. Remove the Litter Tray:
① Press both orange latches simultaneously.
② Lift the litter tray straight up to detach it from the base.

3. Waste Drawer:
① Take the waste out using the PULL handle of the base.
② Remove the bag clip on the waste bag, then dispose of it.

Tip:
Empty every 3–5 days to reduce odors and bacterial growth.

3. Detach the Drive Boxes:
① Press the side release buttons.
② Pull out the left and Right Drive Boxes.

4. Separate-Disassemble the Litter Tray Parts:
① Detach the litter tray lid, and full-cover litter pad.

Warning:
Do not submerge the drive boxes. Wipe with a damp cloth only.

5. Litter Tray:
① Empty any remaining litter.
② Wipe the tray with a damp cloth. Rinse the inside with water or a soft brush.

Tip:
Tray prefer a clean environment. Clean the full tray lid (including the Full-Cover Litter Pad) at least once per month to minimize residual odors.

6. Base Unit:
① Do not rinse or submerge the base.
② Wipe with a damp cloth and dry.

Cleaning & Maintenance

1. Litter Guard:
① The litter guard can be removed anytime. Rinse with clean water or scrub gently with a soft brush.

2. Waste Drawer:
① Remove the waste bag before disposal.
② Wipe the drawer with a damp cloth.

3. Drive Trays:
① Remove the drive boxes.
② Wipe with a damp cloth.

4. Base Unit:
① Do not rinse or submerge the base.
② Wipe with a damp cloth and dry.

Troubleshooting

Problem	Cause
Manual Cleaning → Red LED On	1. Check if the waste drawer is full. If full, replace the waste bag. 2. Make sure the waste bag is installed properly and clear any jammed debris. 3. Check for any foreign material or sensors between the base and waste drawer with a clean cloth or cotton swab.
Manual Cleaning → Red LED Flashing	1. Check whether the waste drawer is fully seated. Remove and reinstall. 2. Make sure waste drawer rails under the unit for debris. Clear any obstructions and reinstall the drawer.
All Red LED Flashing (Clean + Manual + Levelling/Resetting together)	Ensure all components (left/right drive boxes, litter tray, stainless steel litter guard, and full-cover litter pad) are correctly installed in their positions.
Status Light → Orange LED On	1. Make sure the unit is placed on a flat, hard surface with no obstructions within 6.5 ft. 2. Ensure the unit is not leaning against walls or near large running appliances. 3. Check if the Full-Cover Litter Pad sags or firmly touching the ground. 4. Inspect the litter chamber for any objects that may be obstructing movement. 5. After adding litter, press Level to redistribute the weight.
Litter Tray Rotates Repeatedly	Check whether the litter level exceeds the MAX line inside the litter tray. Overfilling may cause overload.
Litter Tray Not Rotating / Stops During Rotation	1. Ensure both the power adapter and DC jack are firmly connected. Start power cycle the unit. 2. Check for any jammed debris. If jammed, stop cleaning, remove debris, and restart.
Clean Litter Falling into Waste Drawer	1. Confirm that the litter guard was removed. Use litter type: Small particle litter (e.g. tofu/wood/paper/bentonite clumping litter) or large granular litter (e.g. crystal litter). Large-granular litter is not suitable for this product. 2. Ensure the Full-Cover Litter Pad is installed correctly. 3. If you're unsure what litter guard you have, please contact customer service for a replacement.
Where to Find Replacement Accessories	**Waste Bag** → ASIN: B0G4ND3NCP **Full-Cover Litter Pad** → ASIN: B0G4PLL47X **Litter Guard** → ASIN: B0G4PLL47X **Litter Box Base** → ASIN: B0G4PRPRR2 Unless sure the power adapter is firmly plugged in and the unit is powered on. 1) Ensure Bluetooth on your phone is turned on. 2) Ensure your phone's Wi-Fi is set to 2.4GHz. If it's set to 5GHz, you won't see the device. The device supports both 2.4GHz and 5GHz Wi-Fi. 3) Check that the device is in Wi-Fi pairing mode (Wi-Fi indicator flashes quickly).
Wi-Fi Not Connecting	

Problem	Cause
Wi-Fi Button → Red LED On	1) Check whether the Wi-Fi network is disconnected. 2) Check whether the device is connected to the app. 3) Open the app to confirm whether the device shows as online.

Hazardous Substances Table

Part Name	Hazardous Substances or Elements						
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr^{6+})	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	○	○	○	○	○	○
Plastic	○	○	○	○	○	○
Metal	○	○	○	○	○	○
Accessories	○	○	○	○	○	○

Notes:
① This table is prepared in accordance with the standard SJ/T 11364.
② "○" indicates that the content of the hazardous substance in all homogeneous materials of this part is below the limit requirements specified in GB/T 26572.
③ "×" indicates that the content of the hazardous substance in at least one homogeneous material of this part exceeds the limit requirements specified in GB/T 26572.

Connect to the App

1.Download the App
Search "oneisall" in the App Store (IOS) or Google Play (Android) and install the app.

App Store — Download on the
Google Play — GET IT ON
oneisall APP

2.Add Your Device
Open the app and tap "+" on the home screen.

3.Connect Your Device
Follow the on-screen instructions to complete pairing.

4. Wi-Fi Compatibility: 2.4G Hz & 5G Hz.

Contact Us
GPSR Product Information
FCC Statement:

Contact Us

WE ARE READY TO HELP

Oneisall offers a standard 2-year warranty. If you have any issues with your Oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our Oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing Oneisall.

Please note that the Oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It is important to be aware that the warranty also does not cover consumable parts such as waste bags, full-cover litter pad, and litter guard. For these items, these parts may require regular replacement or maintenance.

support@oneisall.com
+1 (877)-522-3575 (US) Mon-Fri 9am-5pm (PST)
www.oneisall.com

Scan to Download the App
Scan to Join the Community

@Oneisall Official

Oneisall APP Download

GPSR Product Information

EC REP
Name: Apex CE Specialists GmbH
Add: Großenbaumer Allee 271-281 40237 Düsseldorf DE
Contact Person: Weiki Yan
Tel: +15525200339
E-Mail: info@apex-ce.de

UK REP
Name: APEX CE SPECIALISTS LIMITED
Add: 3 Hawkins Road, Colchester, England, NR6 5AE
Contact: Weiki
Tel: +44161277050
E-Mail: info@apex-ce.com

Warning:
- Do not dispose of the product in household waste.
- Consult the dealer and experienced radio/TV technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

FCC Statement:

This device complies with part 15 of the FCC Rules.Operation is subject to the following two conditions:
1.This device may not cause harmful interference,and
2.This device must accept any interference received,including interference that may cause undesired operation.
NOTE:This equipment has been tested and found to comply with the limits for Class B digital device,pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer and experienced radio/TV technician for help.
This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

oneisall
TRANSFORM YOUR PET PET

Any problems you have, please contact us :
support@oneisall.com

Scan to Download the App
Scan to Join the Community
Oneisall Support

ON-0225

CB01 英文说明书_版本V0
尺寸: 135X195mm
材质: 127g双铜
印刷: 封面封底: 专+黑色印刷
内页: 黑白印刷
折叠方式: 骑马钉

PANTONE 2018C

说明书/站卡表	外观	表面文字和图案清晰，无切割不整齐，污渍，混点（黑点，白点），褶痕，皱字，重影，印刷内容，万向，位置运马图纸或样板相符。
		颜色与图纸或样板一致。
	尺寸	误符合图纸要求或与样板一致。